


## Installation Manual For New Construction

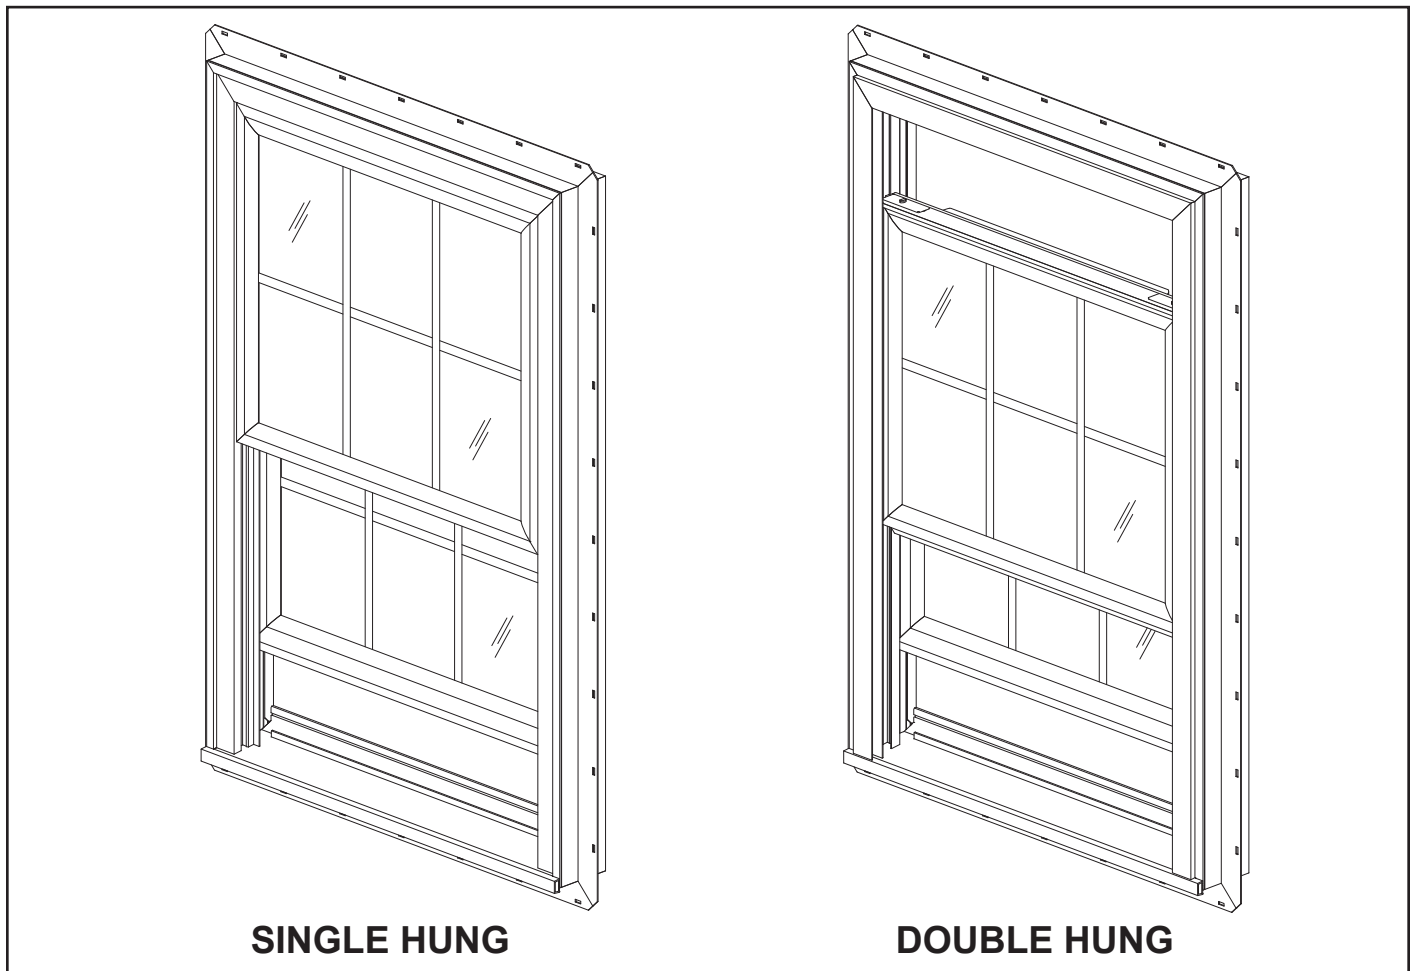

### SYSTEM DESCRIPTION

- Variations: **StyleView Classic Single Hung**  
**StyleView Classic Single Hung Archtop**  
**StyleView Classic Double Hung**
- 3-1/4" Overall Depth with Trim, 3-1/16" without Trim
- Tilt-in Bottom Sash; Removable Upper Sash for Single & Double Hung
- 3/4" Insulating Glazing
- Optional Screens
- Grille options available
  - Simulated Divided Lines
  - Sculptured Grids Between Glass
  - Flat Grids Between Glass
- Available in White, Tan, Stone, Bronze, and Black Colors





## TABLE OF CONTENTS

Installation Notes .....	Page ii & iii
Tools You'll Need .....	Page iv
<b>PREPARATION</b>	
Measure Rough Opening and Install Sill Flashing .....	Page 1
<b>INSTALLATION</b>	
Install Window .....	Page 2
Supplemental Head Anchors.....	Page 3
<b>FINISHING</b>	
Apply Perimeter Flashing .....	Page 4
<b>ADDENDUM</b>	
Top Sash Removal for Single Hung Windows .....	Page 5


 





 
 




**INSTALLATION NOTES**

1. Do not drop, roll or drag boxes of vinyl windows. Move and stack boxes with proper support to prevent distortion. If fork lifts are used, be especially careful about striking the boxes when lifting or moving.
2. Store in a dry, out of the way area. If rain exposure, condensation or any water contact is likely, then all packaging material should be removed. Wet packaging materials will discolor and may stain vinyl finishes.
3. All materials should be checked for quantity and quality upon receipt, YKK AP must be notified immediately of any discrepancies in shipment.
4. Check to make sure that you have the required shims, sealants, supplies, and tools necessary for the installation (not supplied by YKK AP).
5. Carefully check the openings and surrounding conditions that will receive your material. Remember, if the construction is not per the construction documents, it is your responsibility to notify the general contractor in writing. Any discrepancies must be brought to the general contractor's attention before you proceed with the installation.
6. Collect your shop drawings, materials, packing list, and this installation manual. Carefully review parts location, the sequence of installation, when you glaze it, and how you seal it. Installation instructions are of a general nature and may not cover every condition you will encounter. The shop drawings and/or installation manuals were prepared specifically for the product.
7. Any material substitutions must be of equal or greater quality.
8. Make certain that material samples have been sent for compatibility testing for all manufacturer's sealants involved. Make certain that sealants and backer rod have been installed in strict accordance with the manufacturer's recommendations and specifications.
9. System-to-structure fasteners are not supplied by YKK AP. Fasteners called out on shop drawings are to indicate minimum sizes for design loading.
10. If any questions arise concerning YKK AP products or their installation, contact YKK AP for clarification before proceeding.

## INSTALLATION NOTES

11. YKK AP window installation is typically completed before drywall, flooring and other products which may still be in process. Take the extra time to wrap and protect the work produced.
12. YKK AP StyleView windows are pre-finished, prefabricated, preassembled, and preglazed products, and must be protected against damage.
13. Concrete, mortar, plaster, muriatic acid and other alkaline and acid based construction and cleaning materials may be very harmful to window hardware and should be removed with water and mild soap immediately or permanent damage or staining of the finishes will occur. A spot test is recommended before any cleaning agent is used, and abrasive type cleaners must never be used.
14. Windows are never to be used as ladders, step stools, scaffolds, scaffold supports, or as pass through openings for materials.
15. All windows must be installed plumb, square, level and true, and in accordance with approved shop drawings and these installation instructions.
16. Do not use brick wash after windows are installed. Doing so will void the window warranty.
17. Windows should never be stored in an area where temperatures will exceed 140° F. Doing so will void the window warranty.
18. Windows should never be painted. Doing so will void the window warranty.
19. Buildings constructed prior to 1978 may contain lead paint which could be disturbed during replacement. For more information on proper management of lead paint, visit [www.epa.gov/lead](http://www.epa.gov/lead)
20. The glass has been specified by shop drawings and YKK AP is not responsible for conformance with local building codes other than to provide the approved glass. It is the installers' responsibility to ensure final compliance of the glazing with all applicable codes.
21. Check our website, [www.ykkap.com](http://www.ykkap.com), for the latest installation manual update prior to commencing work.

## TOOLS YOU'LL NEED

 <p>Tape measure</p>	 <p>Color-matched interior/exterior silicone window and trim sealant</p>
 <p>Level</p>	 <p>House wrap tape</p>
 <p>Power screwdriver and bits</p>	 <p>Felt paper flashing or equivalent (at least 6" wide)</p>
 <p>Galvanized roofing nails or #8 pan head corrosion-resistant screws (capable of penetrating at least 3/4" into the framing structure)</p>	 <p>Flashing (at least 6" wide)</p>
 <p>1/4" Shims</p>	 <p>Rubber mallet or hammer</p>
 <p>Caulk gun</p>	 <p>Remnant fiberglass insulation</p>
 <p>Putty Knife (for Single Hung top sash removal)</p>	

## PREPARATION


### STEP 1: Prepare the Opening

-Ensure the rough opening is 1/2" larger than the window to be installed and that the rough opening is plumb and square. See **Detail 1**.


**Note:** The frame size of the window does not include any protruding nail fins.

-Close and lock the sash(es) to help keep the unit square.

- Apply flashing to the sill. See **Detail 2**.
- Apply a continuous bead of silicone caulk to the perimeter of the rough opening where the nail fin will make contact (no more than 1/4" from the edge of the rough opening.) Leave two 3" gaps for weepage at the sill flashing as shown.

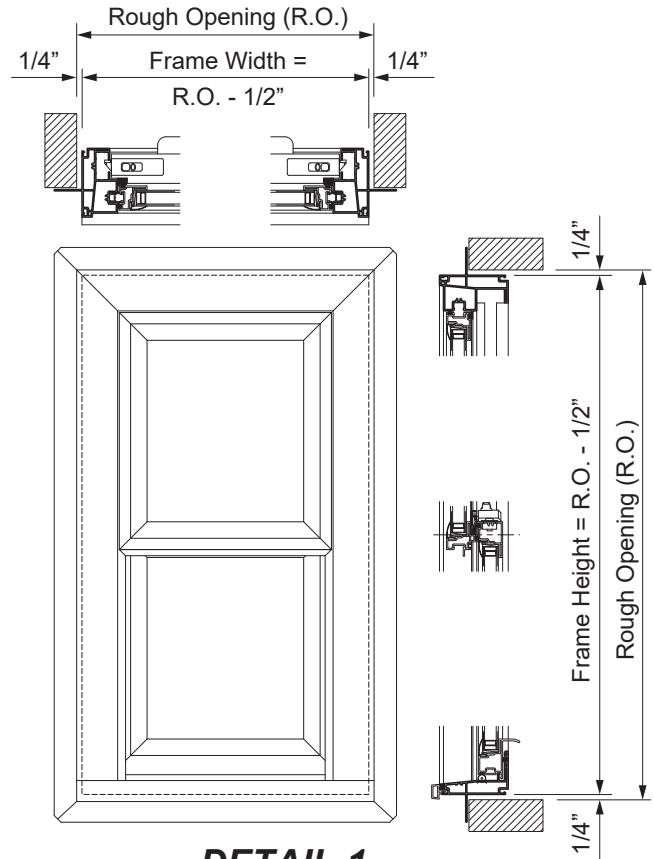

**DETAIL 1**

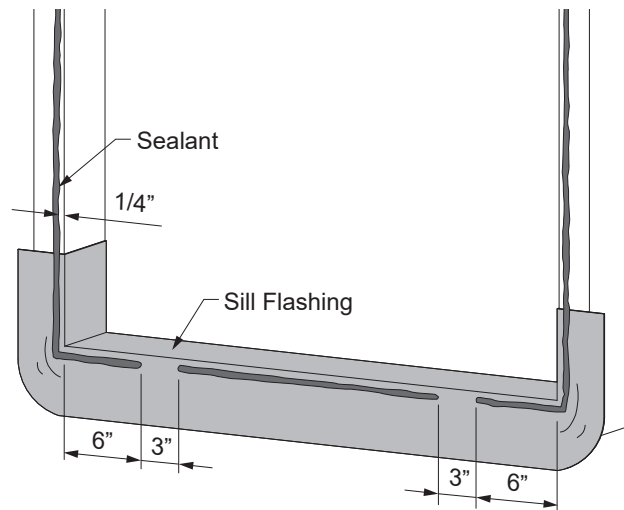

**DETAIL 2**

## INSTALLATION

### STEP 2: Install the Window


-Place 1/4" shims at either end and at every 12" maximum on center of the level sill plate. Place the window in the rough opening from the exterior, and center the unit in the opening, leaving a 1/4" gap between the unit and the rough opening on all sides. See **Detail 3**.

-Secure the unit by loosely fastening through the center of one nail slot at the top of one of the jambs using a 7/16" head x 1-1/2" galvanized roofing nail or a #8 pan head corrosion resistant screw. (Other nails and staples are prohibited.)


-Ensure the frame is plumb and the jambs straight. Shim at the top, bottom, and midpoint to correct any deflection.

-Take diagonal measurements to ensure the unit is square. Opening the bottom sash approximately 1/8" will provide visual confirmation of proper setting, that the reveal between the frame and sash (A & B) are equal the entire width. See **Detail 4**.

-Finish nailing the unit using every other nail slot (every slot for DP50 or greater). Operate window to confirm proper installation.

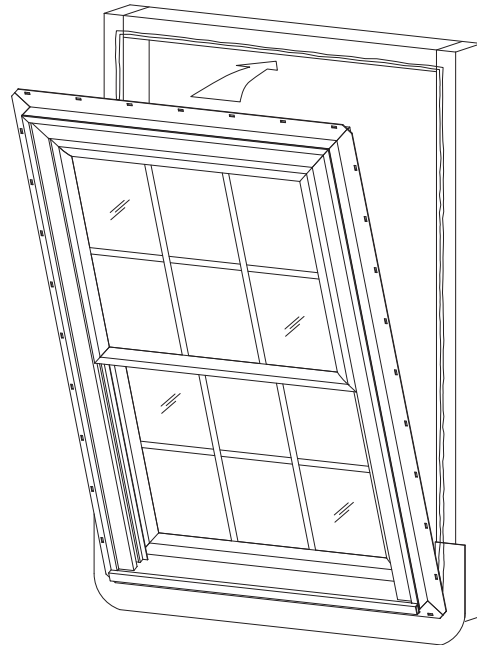

**DETAIL 3**

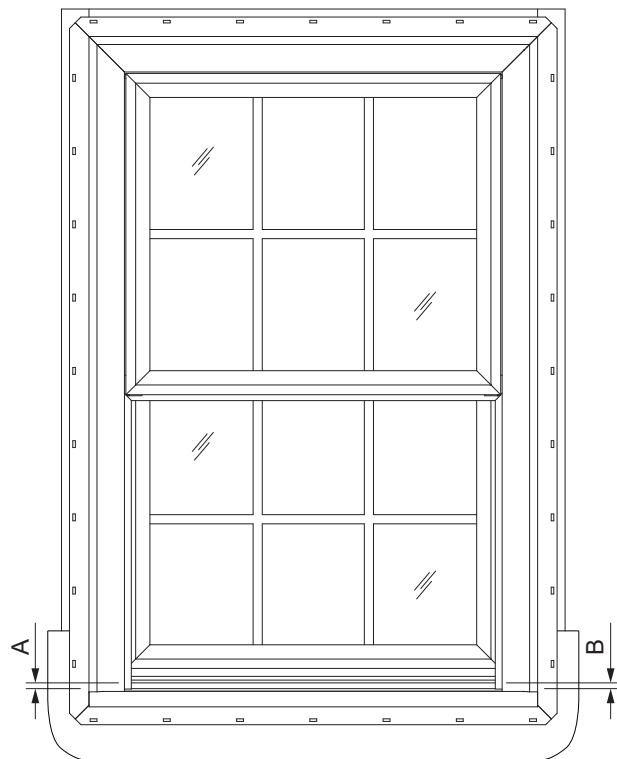

**DETAIL 4**




## INSTALLATION

**STEP 2A: Supplemental Head Anchors**  
 (Required only for Hung Windows that meet all of the following criteria:


- Twin or Triple Windows w/ Common Mullion,
- DP50 Design Pressure,
- Window Heights of 60" or larger,
- & Used with PVC or vinyl siding or other thin cladding)

- Additional anchoring will be required at the head, located at 6" at each side of the mullion.
  - At the anchor locations, drill a  $\varnothing 0.189"$  (#77 bit) clear hole and  $\varnothing 0.359"$  (#64 bit) access hole at the center of the pocket.
  - Anchor into the head substrate using #8 x 2" pan head screws and cover the access hole with a E3-5057 screw cap.
- For more information please contact your YKK AP representative.

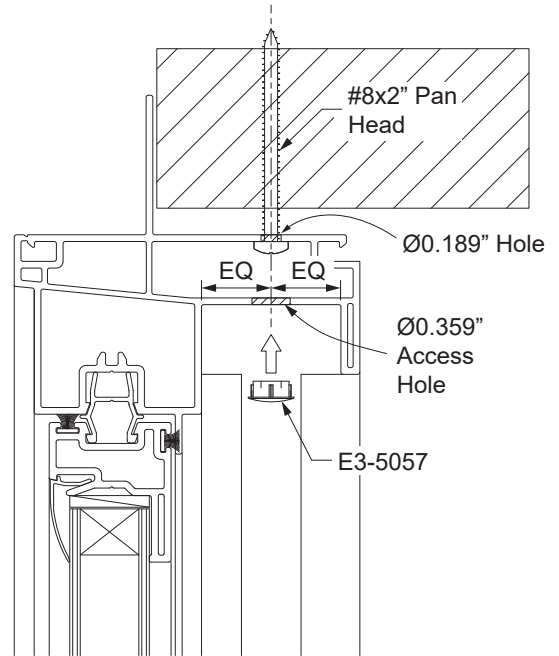

**DETAIL 5**

See **Detail 5 & 6**.

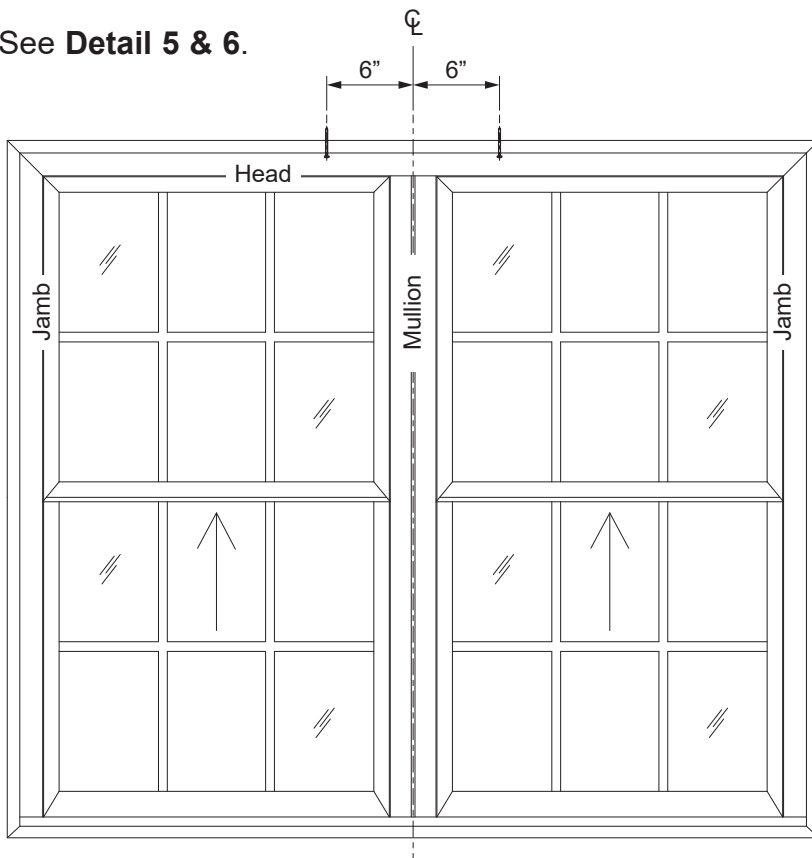

**DETAIL 6**



## FINISHING

### STEP 3: Finishing

-Apply flashing the perimeter of rough opening, covering the vertical nail fin. Apply the flashing at the head and overlap the jamb flashing on both sides. The head flashing should be caulked or taped on the top edge. See **Detail 7**.

-Use fiberglass insulation to insulate the cavity between the window and the rough opening structure.

-From the inside of the window, apply continuous sealant to the interior perimeter of the window sill and 12" up the jambs as shown in **Detail 8**.

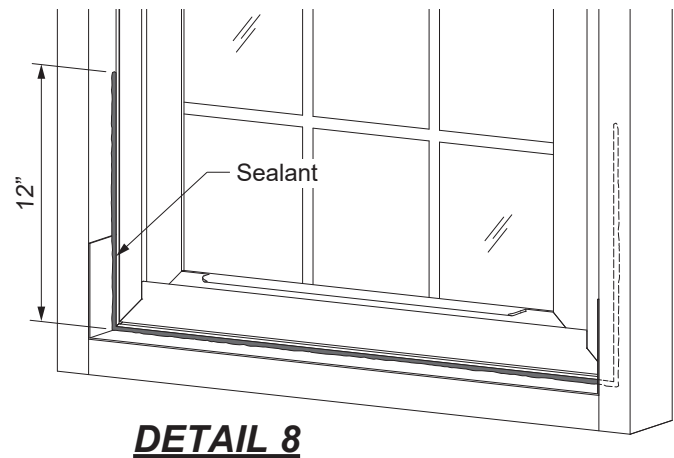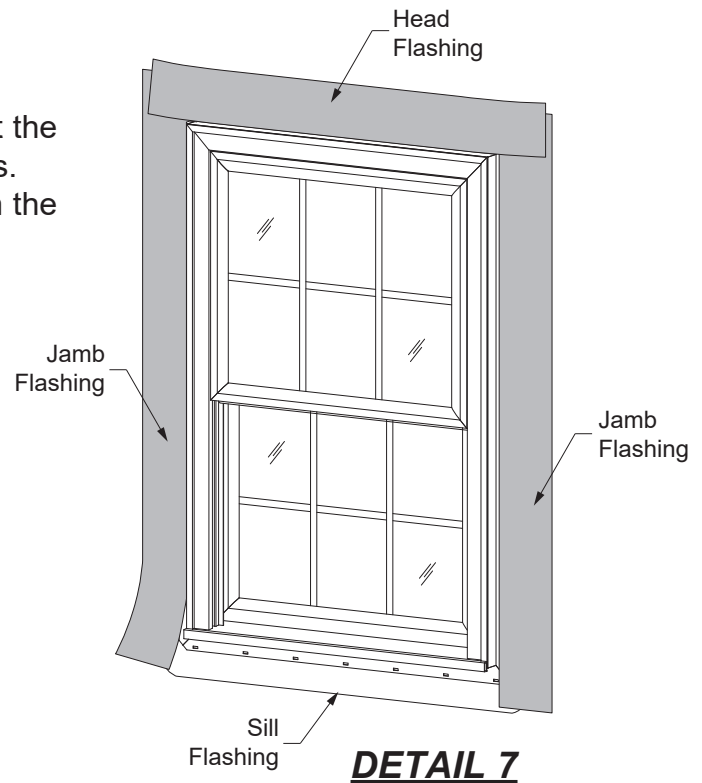

### Notes:

-Do not use expanding or spray-in foam products. If the installer used one of them, make sure jambs remain straight to ensure the operation of the window is not impeded.


-If using brick or stone exteriors, leave a 1/8" gap from the window to allow for brick and mortar expansion. Use a backer rod and silicone caulk to seal the gap.

## ADDENDUM


### TOP SASH REMOVAL FOR SINGLE HUNG WINDOWS:

-Remove the screw on the sash bracket that holds the upper sash in place on each side. Keep the removed screw for re-installation. The sash brackets are located under the bottom corners of the top sash. The sash brackets will remain on the window frame and can slide down the track toward the sill to provide clearance for sash removal. See **Details 9 & 10**.

**Note:** Use a putty knife to dislodge the sash brackets. Use of a flat head screwdriver or crowbar can damage the sash or window framing.

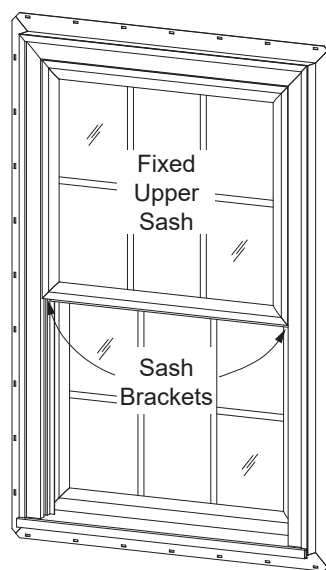


**DETAIL 9**

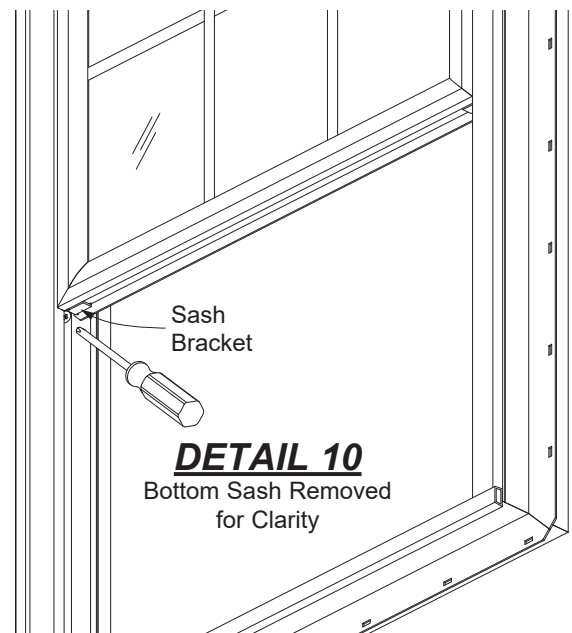

-Pulling downward on the bottom rail (meeting rail) will disengage the sash from the internal retention clips holding in place. The sash must be lowered approximately 8" to release it from the jamb retention clips. See **Detail 11**.

**Caution:** At this point, the sash is disengaged from the frame and requires a hand at the top and bottom to prevent the sash from falling forward.

-To reinstall, reverse the procedures above.

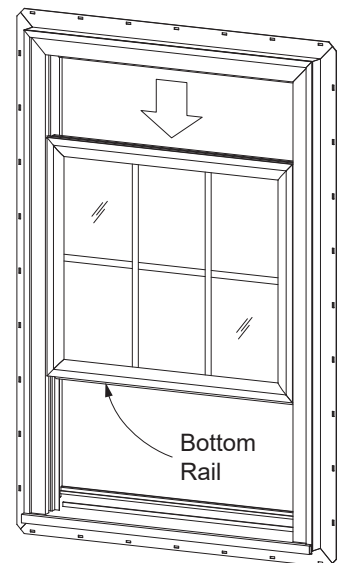

**DETAIL 11**

 YKK AP America Inc.

Headquarters

101 Marietta Street NW  
Suite 2100  
Atlanta, Georgia 30303

Residential Division

100 YKK AP Way  
Macon, Georgia 31216

[www.ykkap.com](http://www.ykkap.com)